


3 1 9 0 - 6 5 2 2

EZ-200-BF-X
3190-6522




**BNC Female (Jack) Straight
Non-Solder Pin No Braid Trim
Connector for LMR-200 Cable**

Made in China

Installation Instruction

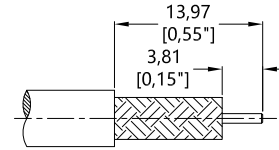

Recommended Cable Strip Dimensions .

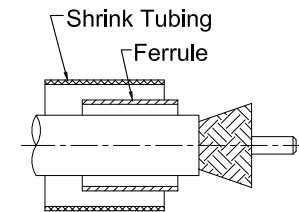

1. A. Trim cable to dimensions shown using Times LMR-195/200 prep tool. Be careful to avoid nicking the braid
B. Remove any residual plastic from center conductor
C. Deburr center conductor using a fine file or Times DBT-U tools

2. A. Slide the ferrule & shrink tubing onto the cable.
B. Flare the braid

3. A. Insert the cable into connector body until dielectric is seated and center conductor is inserted fully into center pin of connector

4. A. Slide crimp ferrule over braid and crimp as close to body as possible using .213" HEX crimp tooling. Pay attention to the crimp area, do not crimp rear of crimp sleeve
B. Heat shrink tube over rear of connector body and down on to cable jacket using hot air gun
C. Times supply rubber boot 3109-445 (WSB-195/200) as an option to instead of heat shrink tube.

Refer to www.timesmicrowave.com for install videos